



### HOW TO MEASURE THE DOOR & WINDOWS AREA

### 1. Doors & Windows Measurements:

# a. Measure the width: i. At the top (Width 1), ii. At the middle (Width 2) and iii. At the bottom (Width 3) b. Measure the Height: i. At the Left Height 1 ii. At the Middle Height 2 iii. At the Right Height 3

Installation - Replacement - Repairs Fly Screens | Windows | Blinds | Doors 1300 39 40 62

www.diamondaluminium.com.au

sales@diamondaluminium.com.au, admin@diamondaluminium.com.au



Customize Design Doors & Windows | The Best View

# c. Measure the Depth (optional):

Finding the correct depth is important because some windows will be too deep to fit into a replacement window opening.

Run a tape measure from the outside of the frame to the inside and take the measurement from edge to edge of the window or door frame.

Do this in several locations around the window frame and rely on the smallest measurement once again as your final dimension.

- ➤ At the top (Depth 1),
- ➤ At the middle (Depth 2)
- ➤ At the bottom (Depth 3)



# Measure the Depth of Flyscreen frame

Windows Flyscreen Frame Thickness 9mm or 11mm.

Just measure frame between 2 finger gap.



Installation - Replacement - Repairs Fly Screens | Windows | Blinds | Doors 1300 39 40 62

www.diamondaluminium.com.au

sales@diamondaluminium.com.au, admin@diamondaluminium.com.au





* Always mentioned the smallest measurement of Width and Height	t. The smallest measurement of	of
the windows or doors are the actual measure.		

RECORD WIDTH 1	, 2	, 3	
RECORD HEIGHT 1	, 2	, 3	
RECORD DEPTH 1	, 2	, 3	

## HOW TO MEASURE THE SECURITY DOOR AREA:


Installation - Replacement - Repairs Fly Screens | Windows | Blinds | Doors 1300 39 40 62

www.diamondaluminium.com.au

sales@diamondaluminium.com.au, admin@diamondaluminium.com.au



Customize Design Doors & Windows | The Best View

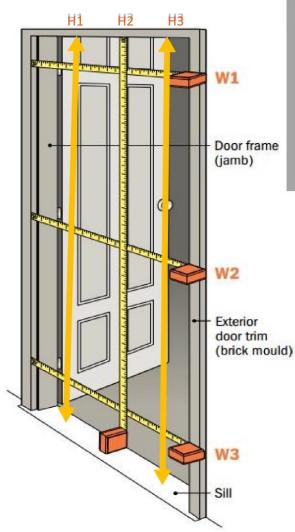



 Height: Measure for height H1, H2, H3 from sill to the underside of exterior trim at the top of the door. Record:

H 1\_\_\_\_\_ H 2\_\_\_\_

2. Width: Measure for width at the topW1, center W2 and bottom W3 from sill to the underside of exterior trim at the top of the door.

Record:

W 1\_\_\_\_\_ W 2\_\_\_\_ W 3

3. Lock Height: Measure the lock height from the sill.

Instruction: Make sure it will not touch with current door lock.

4. Left / Right side: Door Lock is on your left or right side (open and close) from outside.

Record: Left side door lock or right side door lock.

Open from outside.

Installation - Replacement - Repairs Fly Screens | Windows | Blinds | Doors 1300 39 40 62


www.diamondaluminium.com.au

sales@diamondaluminium.com.au, admin@diamondaluminium.com.au





Costomize Design Doors & Windows | the Desi View

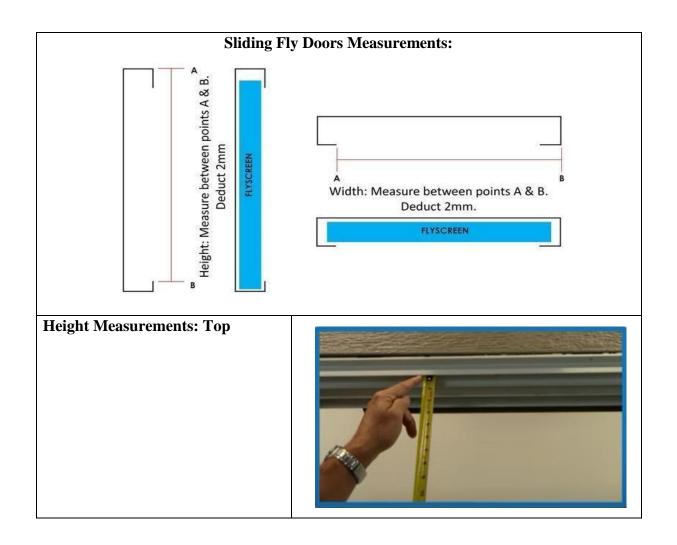


Installation - Replacement - Repairs Fly Screens | Windows | Blinds | Doors 1300 39 40 62

www.diamondaluminium.com.au

sales@diamondaluminium.com.au, admin@diamondaluminium.com.au

**Height Measurements: Bottom** 

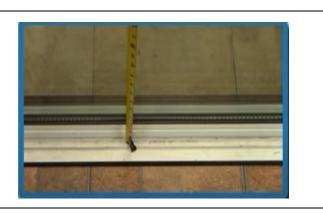

Width Measurements: from Jamb



Installation - Replacement - Repairs Fly Screens | Windows | Blinds | Doors 1300 39 40 62

www.diamondaluminium.com.au sales@diamondaluminium.com.au, admin@diamondaluminium.com.au






Width Measurement: Slide Panel

### **Other Area Measurements:**

Installation - Replacement - Repairs Fly Screens | Windows | Blinds | Doors 1300 39 40 62

www.diamondaluminium.com.au sales@diamondaluminium.com.au, admin@diamondaluminium.com.au



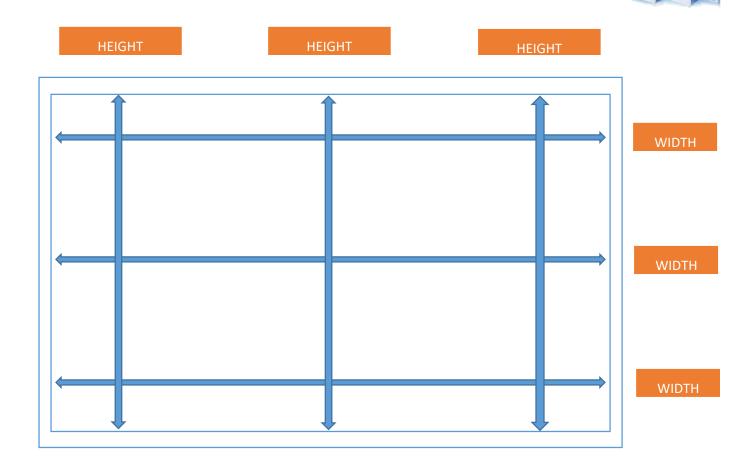

The above measurements are to get an idea for quotation quickly.

Installation - Replacement - Repairs Fly Screens | Windows | Blinds | Doors 1300 39 40 62

www.diamondaluminium.com.au

sales@diamondaluminium.com.au, admin@diamondaluminium.com.au